

Sync and charging with Docking Station

INSPIRIT



Thank you for choosing INSPIRIT.


Data Synchronization

Warning: please respect the following process for proper use of the docking station.

Note : Once the synchronization is done, the data are automatically deleted from the sensors. So be sure you have saved the data on the provide USB Key as mentioned below.

1. Connect all your sensors to the docking station **before powering it up.**
2. Power up the docking station.
3. Wait until the docking boots up (take around 30 seconds)
4. The docking will automatically start the synchronization of the sensors.


1

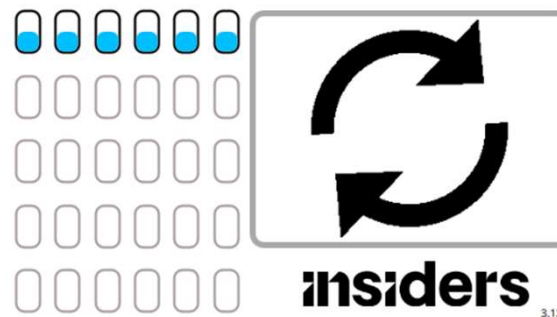

synchronizing sensors


5. Once synchronized, the sensor's icons become green.
6. When all sensors are synchronized, plug the provided USB key on the back of the docking.

2

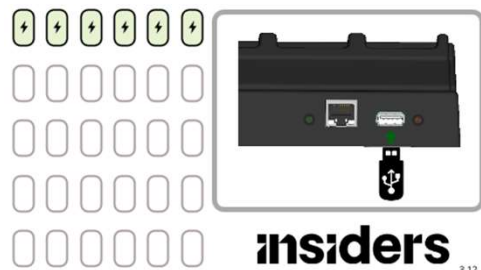

Insert USB key

7. The following screen will appear to confirm all data have been saved on the provided USB key.

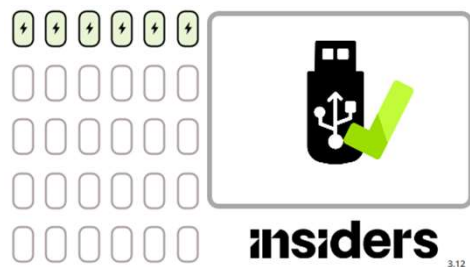


data saved on the USB key

3

8. You can now generate your report by uploading the .dkg file contained in the USB key.

Charging Sensors

For charging the sensors, leave them on the docking station after the synchronization process. While charging, the docking shows a green blinking icon per sensor.

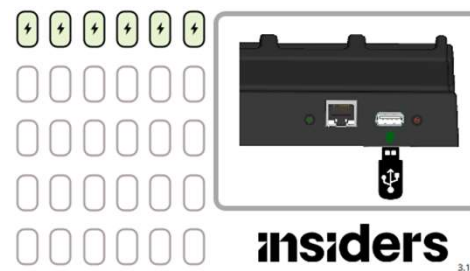

Charging sensors

4

When fully charged, the docking shows a full green icon per sensor.

Should you have any issue, thanks to write to support@insiders.live

We wish you a great experience using INSPIRIT.



Sensors fully charged